Teku Teku Angel

I really wish you ... to be happy

Instruction Manual

Hudson

Katori Micro Pedometer

For Japan Only

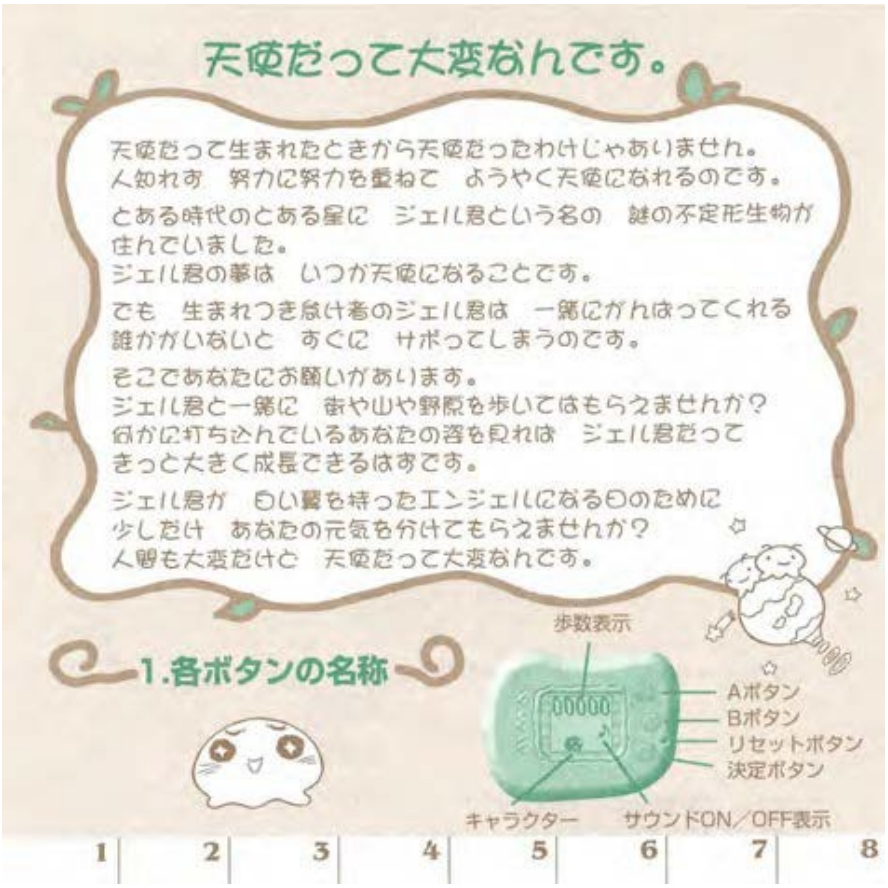

Even Angels Have a Hard Time

Angels don’t have it easy from the moment they are born. They work tirelessly to make humans happy, but humans are quick to get angry or give up, and it’s the angels who are left to deal with it.

There’s a young angel named Gel-Kun. Gel's job is to walk as much as possible. When angels walk, they burn "calories of happiness" and release them into the world, bringing happiness to others. However, Gel can’t release happiness calories unless people help out by walking together with them.

Will you assist Gel and help them walk enough to spread happiness? When you do, the "happiness calories" will begin to flow, and both humans and angels will feel fulfilled. Gel is counting on you to help them reach their goals by walking every day and making the world a happier place!

---

1. Device Display and Buttons

- 表示 Number of Steps
- キャラクター Character
- サウンド Sound ON・OFF Display
- Aボタン A Button
- Bボタン B Button
- リセットボタン Reset Button
- 決定ボタン C Button

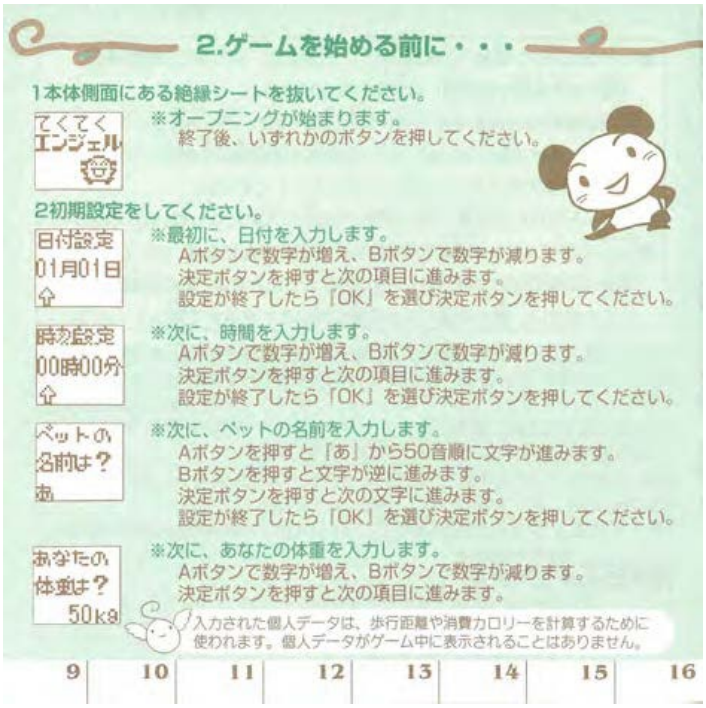

Before Starting the Game…

1. Remove the insulation sheet on the side of the device.

- The intro will play.
- After it finishes, press any button.

---

2. Perform the initial setup.

Step 1: Date Setting

- First, enter the date.
- Press the A button to increase the number and the B button to decrease it.
- When you're ready, select 'OK' and press the confirm button.

Step 2: Time Setting

- Next, enter the time.
- Press the A button to increase the number and the B button to decrease it.
- When you're ready, select 'OK' and press the confirm button.

Step 3: Name Setting

- Next, enter a name for your Gel.
- Press the A button to move forward through characters, and the B button to go backward.
- When you're ready, select 'OK' and press the confirm button.

Step 4: Weight Setting

- Next, enter your weight in kg.
- Press the A button to increase the number and the B button to decrease it.
- When you're ready, select 'OK' and press the confirm button.

※You can modify your name and weight later. Entering your weight is necessary for calorie calculations. If you weigh less than 50kg, please enter 50kg.

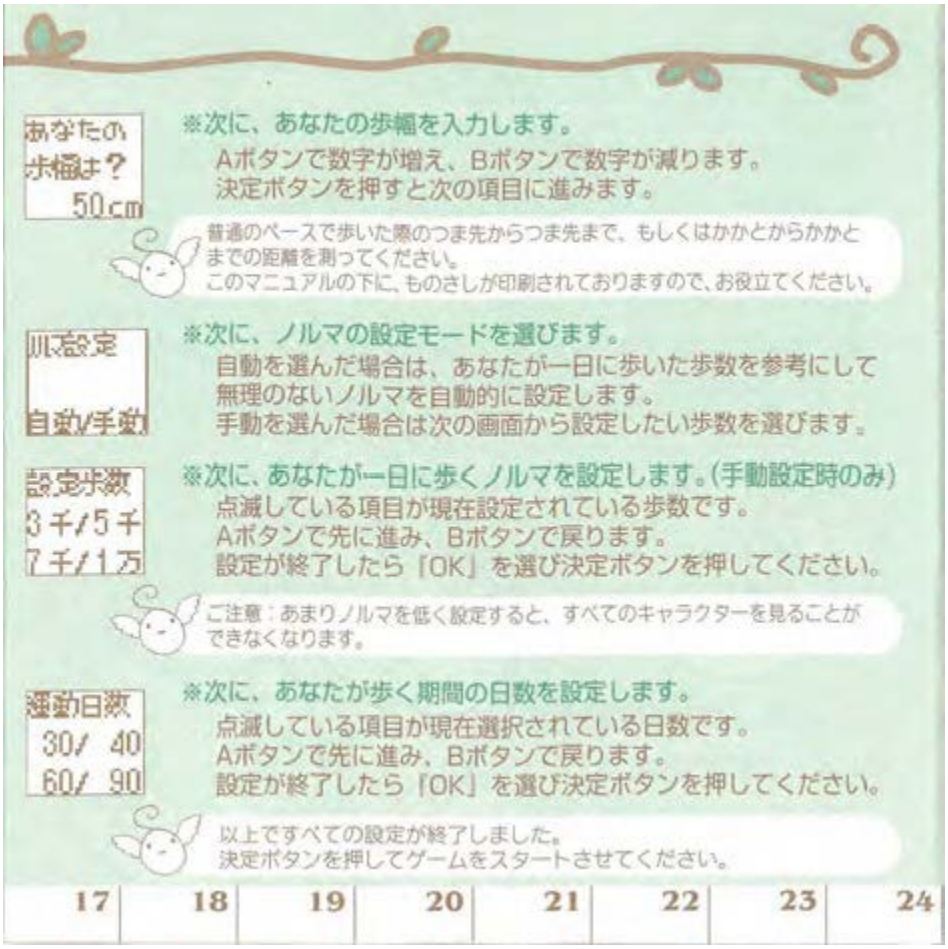

Step 5: Step Length

- Next, enter your step length.
- Press the A button to increase the number and the B button to decrease it.
- When you're ready, select 'OK' and press the confirm button.

Note: If you're unsure of your step length, please refer to the manual or leave it at the default value.

Step 6: Quota Setting

- Next, decide if you want to have your daily step quota's be manual or automatic.
- Select 自働 for automatic step quotas. Select 手動 for manual.
- When you're ready, press the confirm button.

Step 7: Manual Step Setting

- If you chose manual step quota, you will now set the number of steps per day.
- Select 3 for 3000, 5 for 5000, 7 for 7000, or 1 for 10,000.
- When you're ready, press the confirm button.

Final Step: Exercise Goal Setting

- Finally, set the expected duration of your walking routine.
- The options are 30 days, 40 days, 60 days, or 90 days.
- When you're ready, select 'OK' and press the confirm button.

※This completes all the settings. You will now return to the main menu and start the game.

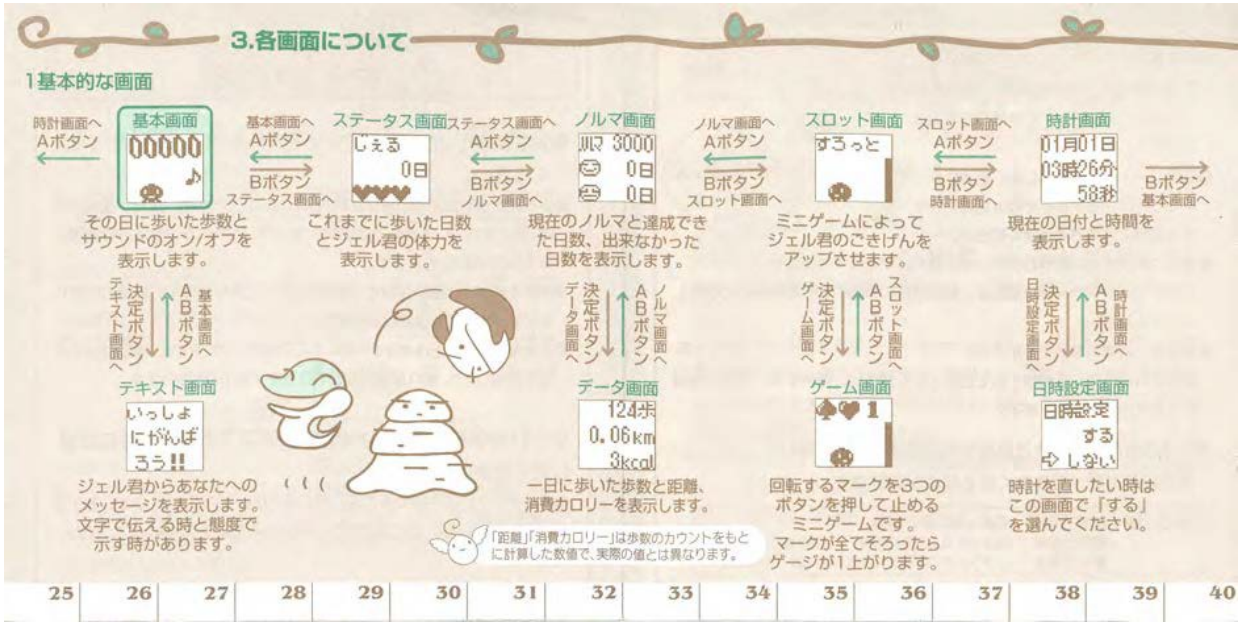

3. About Each Screen

Basic Screen 基本的な画面

Displays the number of steps walked that day and the Sound ON/OFF status.

- **A Button:** Switch to Clock Screen
- **B Button:** Switch to Status Screen
- **C Button:** Displays a message from Gel-Kun

Status Screen ステータス画面

Displays the number of days walked so far and Gel's physical strength.

- Displays the total steps taken and calories burned that day.
- **B Button:** Switch to Quota Screen

Daily Quota Screen ノルマ画面

Displays your daily step quota with the number of days you've achieved it and number of days you have not

- **B Button:** Switch to Slot Screen
- **C Button:** Display data screen which shows km and kcal information.

※ *Note: The exercise and calories burned values are approximate and may not be accurate.*

Slot Screen スロット画面

Play a mini-game to increase Gel's happiness.

- **B Button:** Switch to Clock Screen
- **C Button:** Switch to the game screen. Press A, B, and C to match all three symbols. When all 3 symbols match the gauge will increase by 1. Press A+B to exit back to the slot screen.

Clock Screen 時計画面

Displays the current time.

- **B Button:** Switch to Basic Screen
- **C Button:** Set the time and date

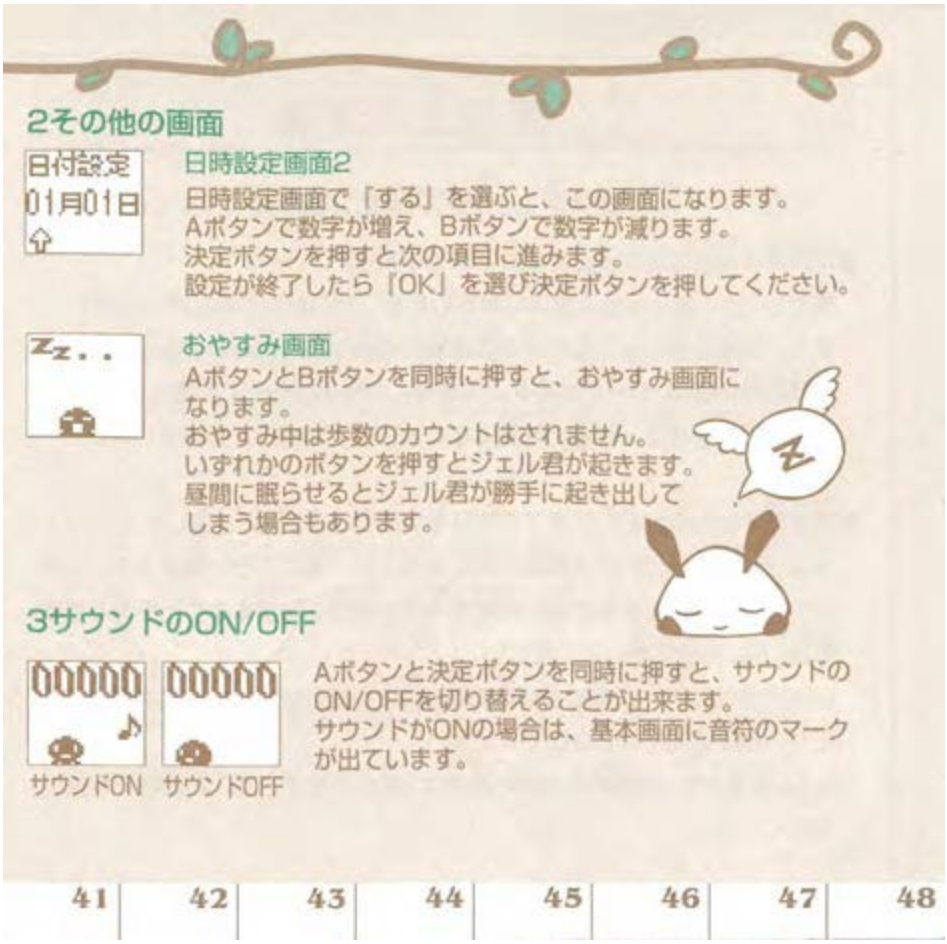

Other Screens

Date/Time Setting Screen

- Selecting 'Set' by pressing C on the Date/Time Setting Screen will take you to this screen.
- Press the A button to increase the number and the B button to decrease it.
- Press the confirm button to proceed to the next item.
- Once the setup is complete, select 'OK' and press the confirm button.

Sleep Screen

- Press the A and B buttons simultaneously to activate the Sleep Screen.
- While in Sleep Mode, steps will not be counted.
- If the Sleep Mode is used excessively, Gel's stats may decrease.
- To exit the Sleep Screen, press both buttons again or press the C button.

Sound ON/OFF

- Press the A button and the C button simultaneously to toggle the sound ON or OFF.
- When the sound is ON, a musical note icon will appear on the Basic Screen.

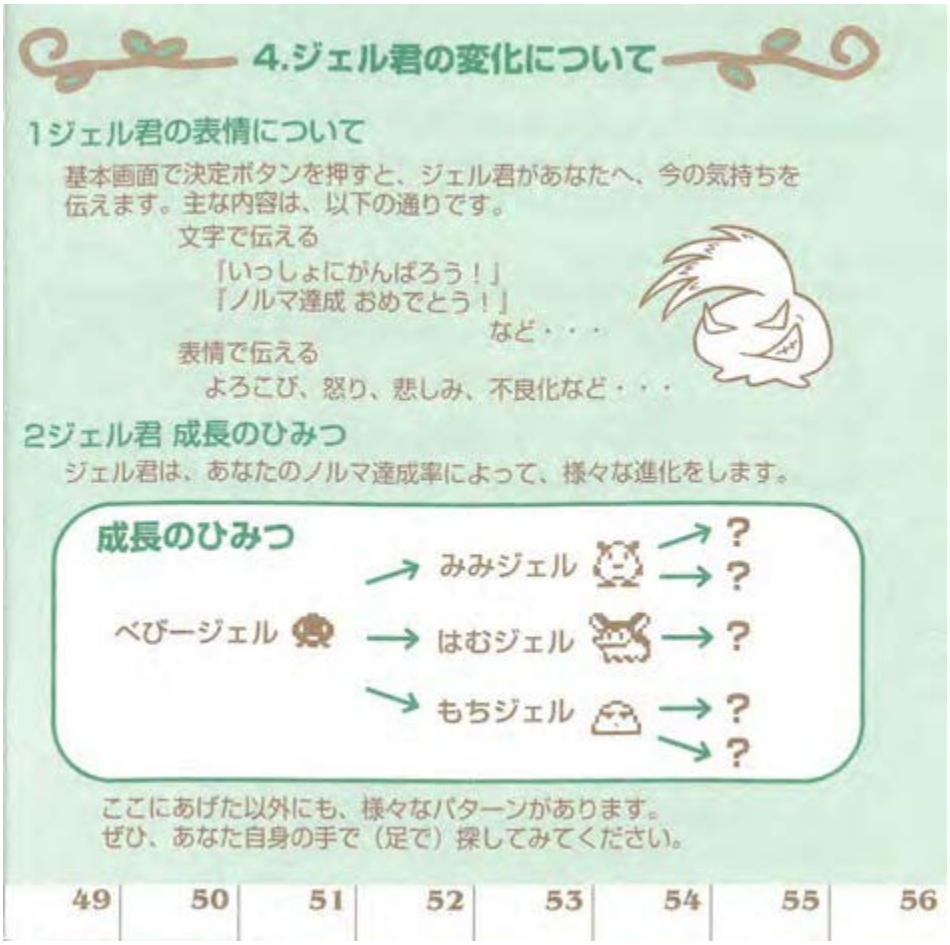

About Gel-kun's Changes

1. Gel's Expressions

- Press the C button on the Basic Screen, and Gel will express their current feelings to you.
- Here are some examples of what Gel might say:
  - **いっしょにがんばろう！** Let's do our best together!
  - **ハッピー発散できるといいな！** I hope I can spread some happiness!
  - **Facial expressions:** Gel might look happy, sad, angry, or even uneasy depending on the situation.

---

2. The Secret to Gel-kun's Growth

Gel evolves in different ways depending on how well you achieve your daily goals.

Growth Secrets:

- **ベビージェル → みみジェル**
  Baby Gel → Mimi Gel
- **ベビージェル → はむジェル**
  Baby Gel → Hamu Gel
- **ベビージェル → もちジェル**
  Baby Gel → Mochi Gel

There are many other evolution patterns beyond those listed here. Meeting goals and varying your activity levels (through walking) are the keys to Gel-kun's growth.

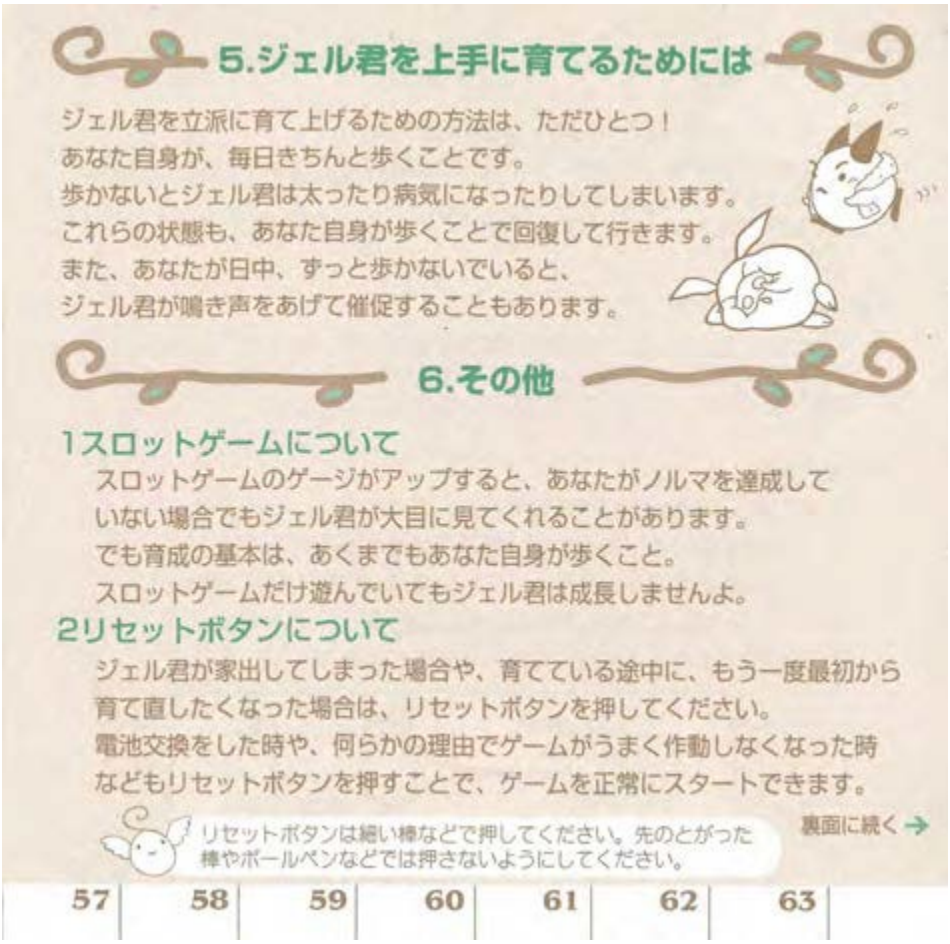

How to Raise a Gel Effectively

The only way to raise Gel well is simple! You must walk diligently every day. If you don't walk, Gel will suffer from a lack of exercise and grow weak. This condition can be reversed by you walking more. If you neglect walking for too long, Gel may even leave the screen altogether in the worst-case scenario.

Other Info

1. About the Slot Game

- As your slot game zone increases, it shows you are meeting your daily goals!
- But don’t get complacent—remember to keep walking!
- Gel won't grow if you only rely on the slot game.

---

2. About the Reset Button

- If Gel leaves you or if you want to start over from the beginning, use the reset button.
- However, once you reset, all your progress in the game will be erased, so make sure to decide carefully.
- After resetting, you can start raising Gel again from scratch.

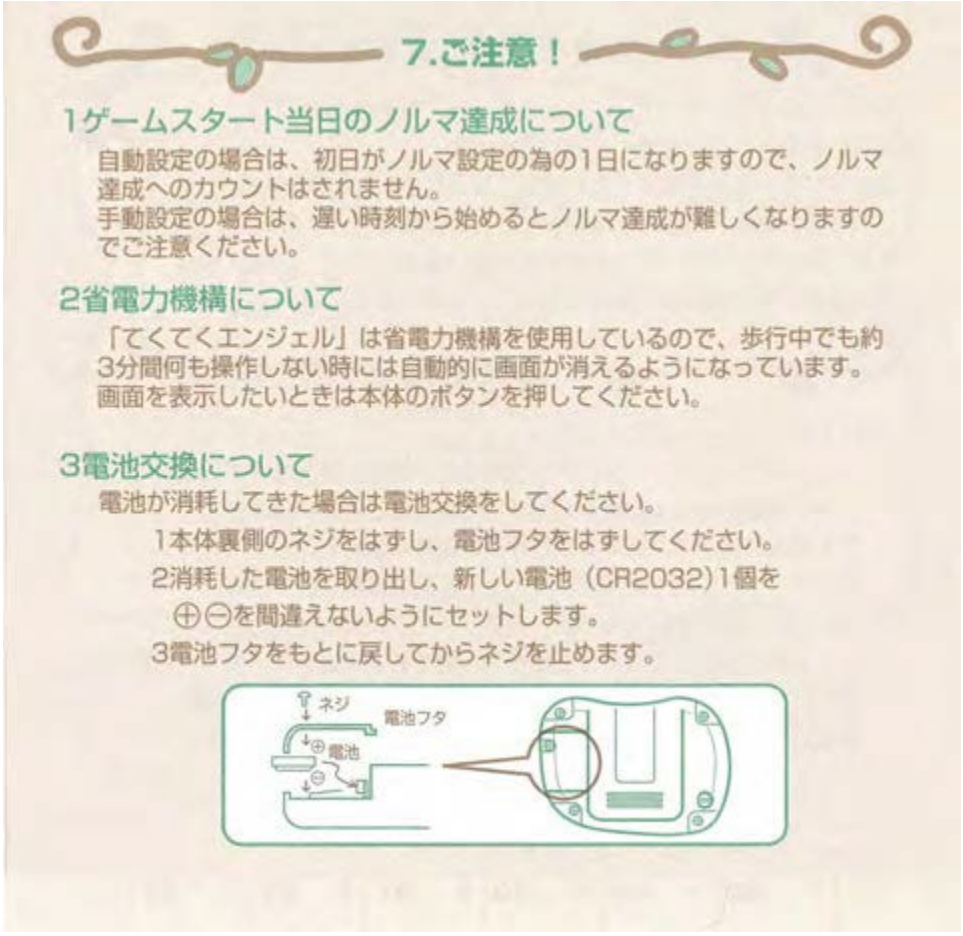

Important Notes!

1. Achieving Your Daily Goal on the Game's Start Date

- If automatic settings are used, the first day is allocated for setting your daily goal, so it will not count toward achieving your goal.
- For manual settings, starting late in the day can make it harder to meet your daily goal, so please be careful.

---

2. About the Power-Saving Feature

- The 'Teku Teku Angel' uses a power-saving mechanism. It displays a power-saving screen during walking, and if no operations are performed, it will automatically enter a power-saving mode.
- To exit the power-saving screen, simply press any button.

---

3. About Battery Replacement

- Replace the battery promptly when it runs out.
    1. Remove the battery cover on the back of the device.
    2. Insert a new coin-type lithium battery (CR2032) in the correct orientation.
    3. Replace the battery cover and reset the device.

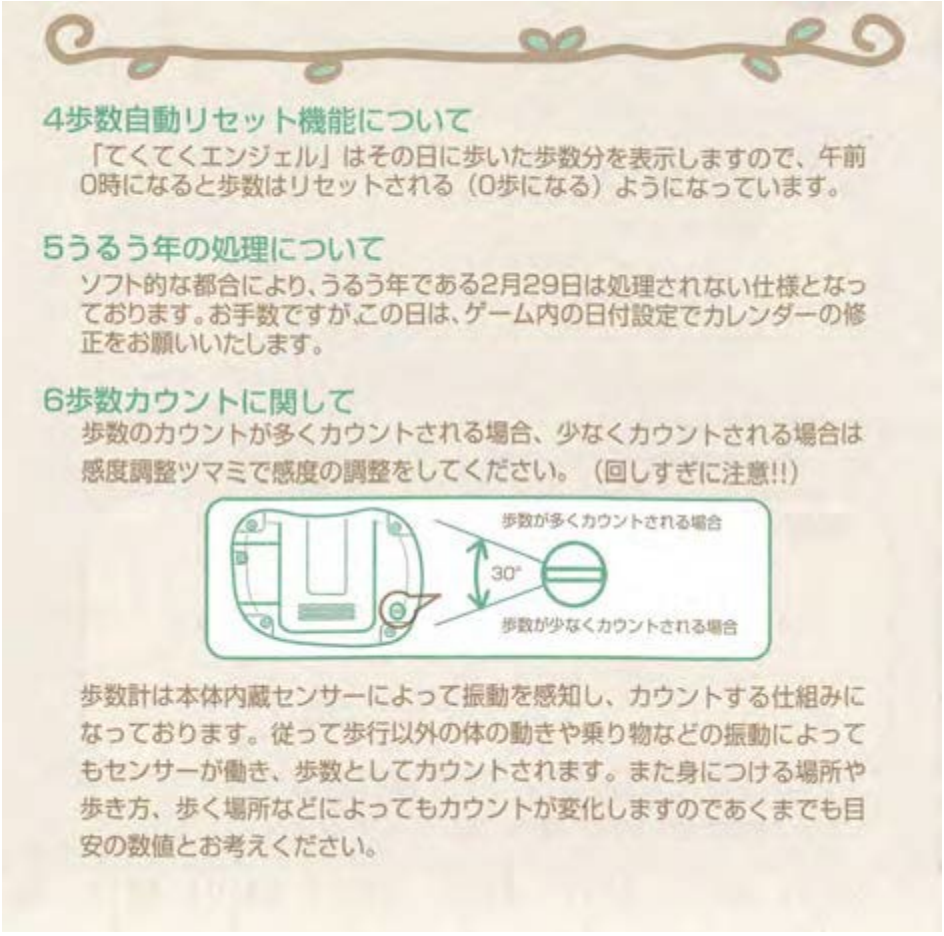

4. About the Automatic Step Count Reset Feature

- The 'Teku Teku Angel' displays the step count for the day. At midnight, the step count is automatically reset to 0.

---

5. About Leap Year Handling

- Due to software constraints, February 29th in a leap year is not recognized.
- Records for that day cannot be made, so please adjust the in-game date settings and your calendar accordingly.

---

6. About Step Counting

- If steps are not being counted properly or are being undercounted, adjust the device sensitivity by carefully rotating the screw on the sensor. (Be cautious not to over-rotate!) 30 degrees to the right is a reasonable adjustment.
- The pedometer works by detecting vibrations through an internal sensor. Thus, weak vibrations or certain walking styles may make it harder for the sensor to detect steps. Excessive vibrations may result in overcounting, so please check your walking style if necessary.

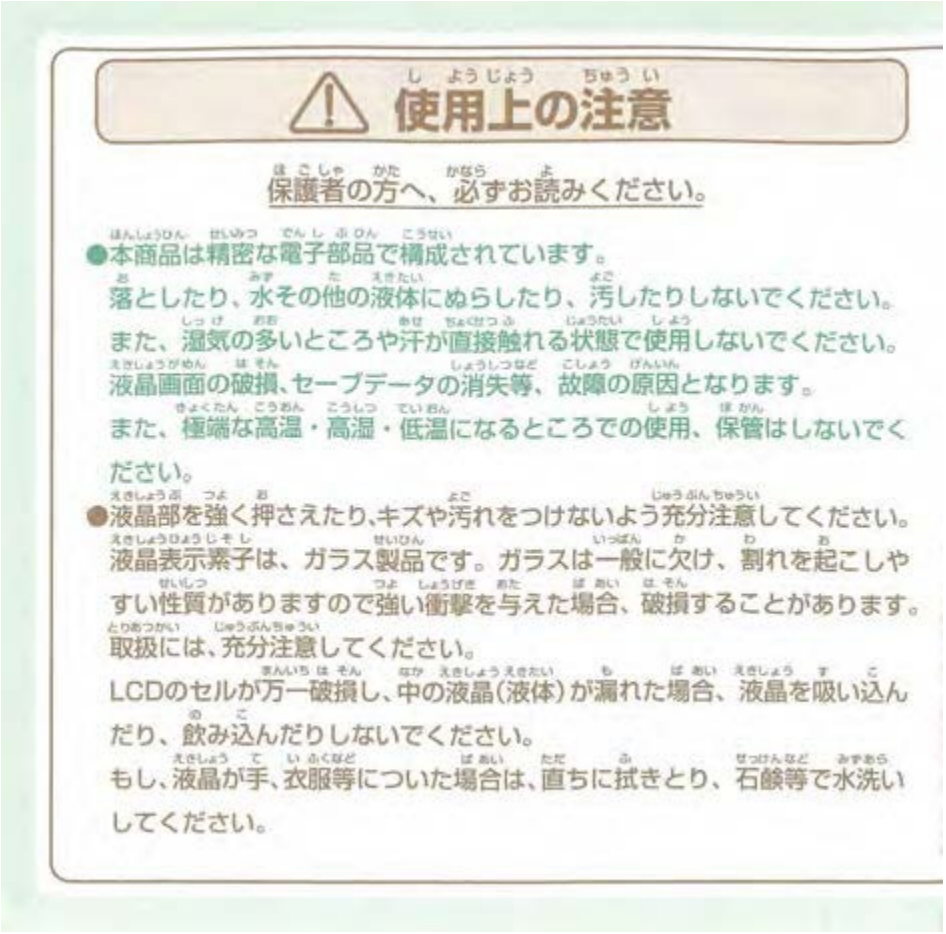

⚠ 使用上の注意

保護者の方へ、必ずお読みください。

●本商品は精密な電子部品で構成されています。
落としたり、水その他の液体にぬらしたり、汚したりしないでください。
また、湿気の多いところや汗が直接触れる状態で使用しないでください。
液晶画面の破損、セーブデータの消失等、故障の原因となります。
また、極端な高温・高湿・低温になるところでの使用、保管はしないでください。

●液晶部を強く押さえたり、キズや汚れをつけないよう充分注意してください。
液晶表示素子は、ガラス製品です。ガラスは一般に欠け、割れを起こしやすい性質がありますので強い衝撃を与えた場合、破損することがあります。
取扱には、充分注意してください。
LCDのセルが万一破損し、中の液晶(液体)が漏れた場合、液晶を吸い込んだり、飲み込んだりしないでください。
もし、液晶が手、衣服等についた場合は、直ちに拭きとり、石鹸等で水洗いしてください。

⚠ Precautions for Use

To Guardians: Please be sure to read this.

● This product is composed of delicate electronic components.
- Do not drop it, expose it to water or other liquids, or dirty it.
- Do not use it in high-temperature environments or in situations where sweat excessively wets the device.
- Delicate equipment may cause save data corruption or malfunction.
- Avoid using or storing it in areas with strong vibrations, high or low temperatures.

● If it gets dirty:
- Be careful not to press too hard while wiping or create scratches or additional stains.
- The LCD screen is made of glass. Glass is fragile, so avoid vibrations or excessive force that may cause it to crack.

● Self-Care for the LCD:
- When cleaning the LCD, lightly dampen a cloth with water and wipe the screen carefully to ensure no liquid enters the interior of the screen.
- Do not use soap or wash it directly with water.

Caution About the Hook

- Do not forcibly pull or bend the hook on the back of the device. Doing so may cause injury or damage.

Insulation Sheet

- Once the insulation sheet has been removed, discard it immediately.
- Be careful to prevent young children who put toys in their mouths from accidentally swallowing it.

Care Instructions

- If it gets dirty, wipe it with a soft, dry cloth.
- Do not use benzine, thinner, or products containing alcohol.

Battery Replacement Reminder

- The battery will deplete. Please replace it promptly when necessary.

Repairs

- Do not disassemble, modify, or attempt to repair the device yourself. This may void repair eligibility.

Specifications

- Product Specifications:
    - Clock: Hours and minutes display (24-hour format)
    - Battery Life: Approximately 3 years (assuming 2 hours of LCD use per day)
    - Battery Type: Lithium coin battery CR2032 (1 unit, included)

To Prevent Dropping...

The device is designed with a hole on the right side of the casing (when viewed from the front, where the LCD screen is located). This hole is intended for attaching a strap, such as a strap commonly used for mobile phones, to prevent the device from being dropped. To prevent drops, attach a strap through the hole as shown in the diagram, or use a belt clip to secure the device.

Please refer to the illustration and follow the instructions.

You can attach a mobile phone strap here as well.

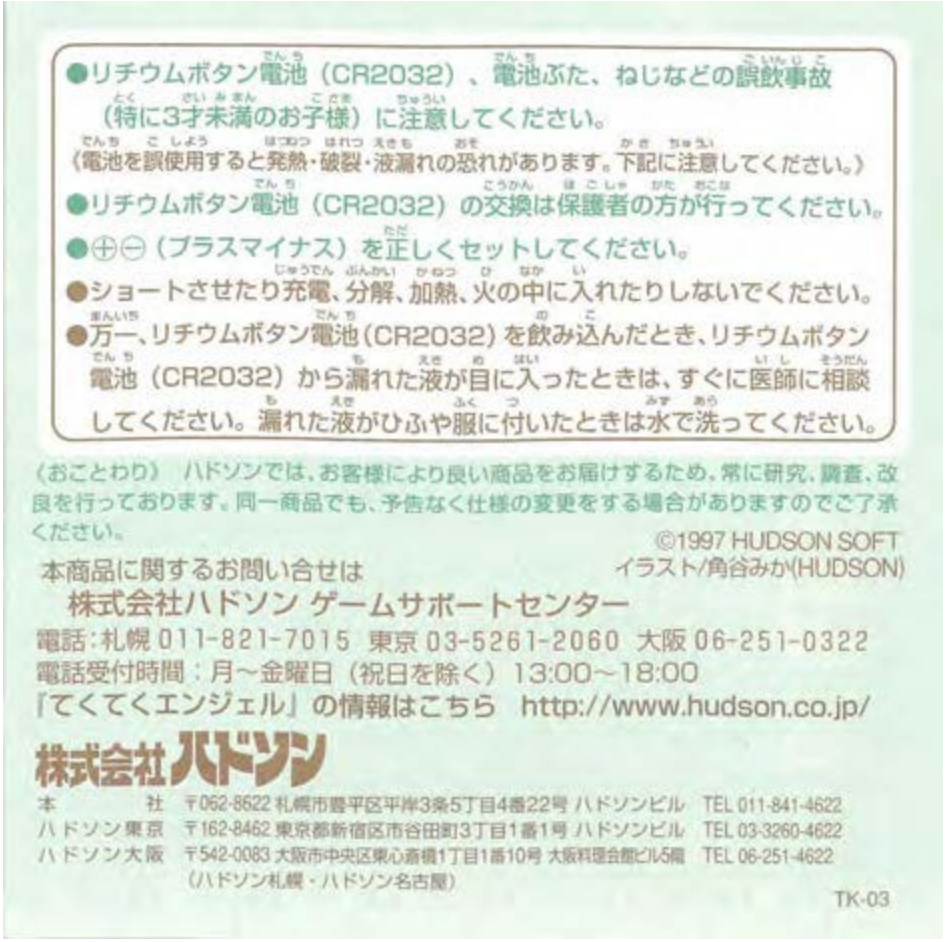

⚠ Important Safety Notes

- Lithium Button Battery (CR2032) — Avoid accidental ingestion or misuse (especially for small children).
  - Store out of reach of small children.
- Battery replacement should be performed by an adult.
- Insert the + (positive) and - (negative) sides correctly.
- Do not short-circuit, heat, or throw the battery into a fire.
- Dispose of used lithium button batteries (CR2032) according to your local municipality's regulations.

Hudson Soft Game Support Center
Phone: **011-821-7015** or **03-5261-2060**
Hours: Monday to Friday (excluding holidays), 13:00–18:00
For more details about "Teku Teku Angel," visit: **http://www.hudson.co.jp/**

Copyright Notice:
©1997 HUDSON SOFT
Illustrations by Hudson